



POLARIS SPORTSMAN XP 1000 S (2020+)

SNOW PLOW MOUNTING KIT (GLACIER P/N 2879630) SNÖPLOG FÖRMONTERAD ADAPTER (GLACIER P/N 2879630)

Code/Kod: **03.9540**

Pos.	Description / Beskrivning	Code / Artikelnummer	Amount / Antal	Checked / Kontrollerade
1	Snow plow mount / Snöplog fäste	03.11601K	1	+
2	Bracket right/ Fäste	03.11606	1	+
3	Bracket left / Fäste	03.11607	1	+
4	Distance bush /	03.11608	2	+
5	Snow plow adapter / Snöplogadapter	03.9501K	1	+
6	Right latch / Höger spärr	03.9503	1	+
7	Left latch / Vänster spärr	03.9504	1	+
8	Bush / Bussning	03.5906	2	+
9	Installation plate /	03.5102	1	+
10	Lifting eye / Lyftögla	OT.10.04.020	1	+
11	Bolt / Bult M8x20 DIN 933	OT.02.02.180	4	+
12	Bolt / Bult M8x30 DIN 933	OT.02.02.200	4	+
13	Bolt / Bult M8x40 DIN 933	OT.02.02.220	4	+
14	Polt / Bult M10x50 DIN 933	OT.02.02.340	2	+
15	Bolt / Bult M14x45 DIN 933	OT.02.02.545	2	+
16	Self tapping bolt / M8x16 DIN7500D	OT.02.06.040	2	+
17	Washer / Bricka Ø8/20 SFS 3738	OT.04.03.030	14	+
18	Washer / Bricka Ø 10 DIN 125	OT.04.01.040	4	+
19	Washer / Bricka Ø14 DIN 125	OT.04.01.055	4	+
20	Nylock nut / Låsmutter M8 DIN 985	OT.03.02.040	6	+
21	Nylock nut / Låsmutter M10 DIN 985	OT.03.02.050	4	+
22	Nylock nut / Låsmutter M14 DIN 985	OT.03.02.065	2	+


Serial numbers/ serie nummer _____ - _____

Completed by / Kompletterad av Gerda Date / Datum 09.12.2020

Packed by / Packad av Hanna Date / Datum 10.12.2020

If you need any spareparts, please send this packing data to your local dealer or to Iron Baltic sales@ironbaltic.ee.
Om du behöver reservdelar, skicka denna lista till din lokala återförsäljare eller till Iron Baltic sales@ironbaltic.ee.

Keep this manual for future reference!
Behåll den här bruksanvisningen för framtida referens!

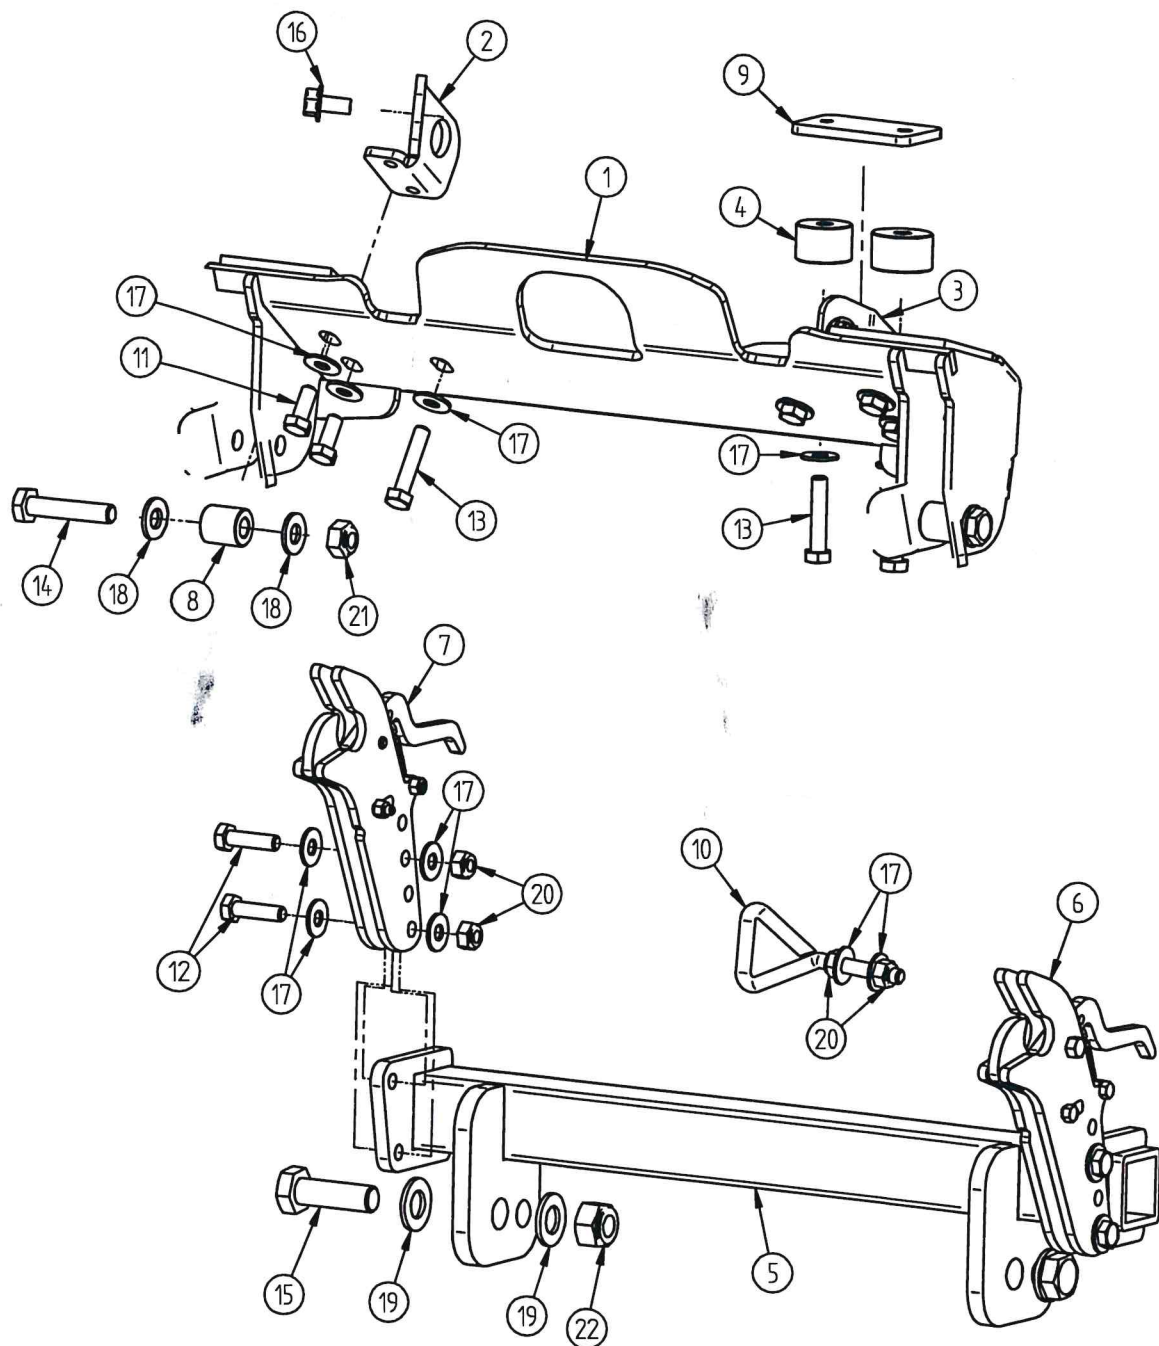




Fitting Instructions / Monteringsanvisningar


- Step 1 Install bushes 03.5906 to adapter.
 Steg 1 Installera bussningar 03.5906 i adapter.



- Step 2 Install mounting brackets 03.11606 and 03.11607 to the ATV. Self tapping bolts may need a little bit more downforce while screwing them in! Remove original bolts indicated with arrows.
 Steg 2 Montera monteringsfästen

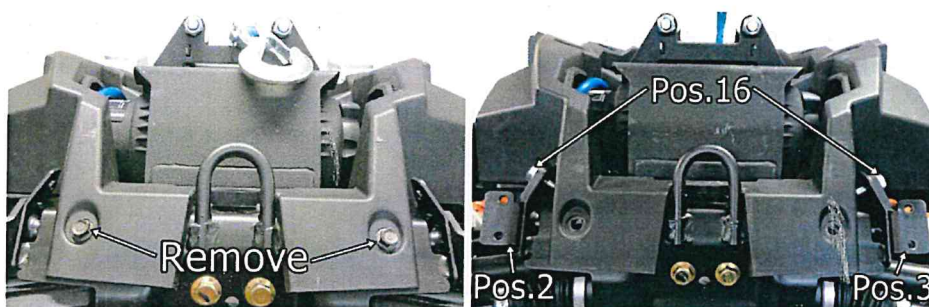

- Step 3 Install snow plow adapter 03.11601K. If using adapter with IronBaltic skid plate, then install the adapter UNDER the skid plate. Push the adapter towards the front as much as possible and then tighten the bolts.
 Steg 3 Om du använder adapter med "Iron Baltic" bukskydd, montera sedan adaptern på

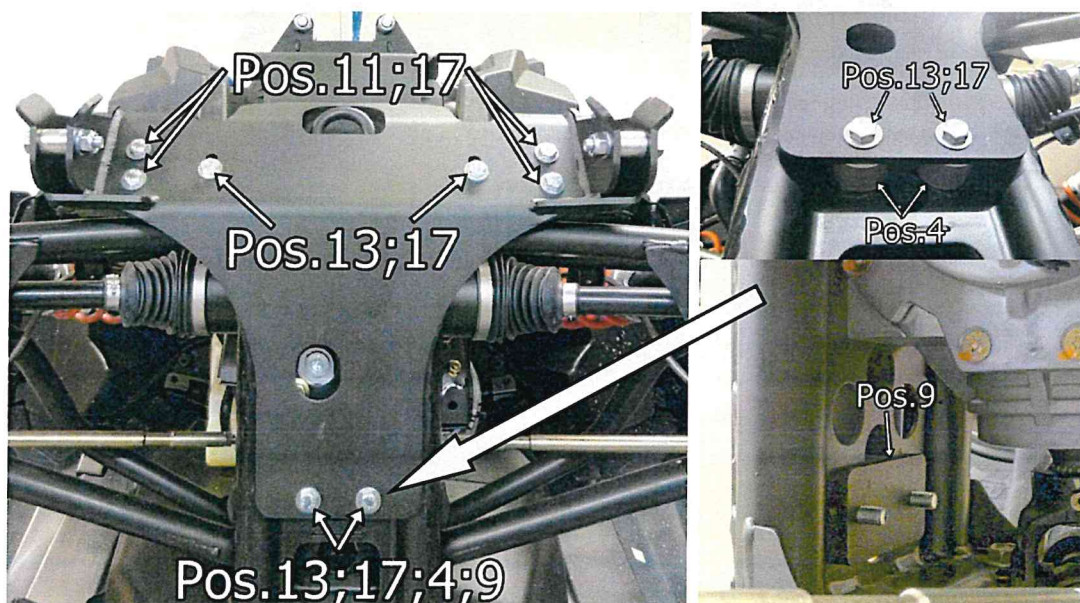




- Step 4 Install adapter to snow plow. After that install latches to adapter.
 Steg 4 Installera adapter för snöplog. Därefter installeras låsningarna på snöplogadaptern.



- Step 5 Install lifting eye to snow plow.
 Steg 5 Installera Lyftögla för snöplog.

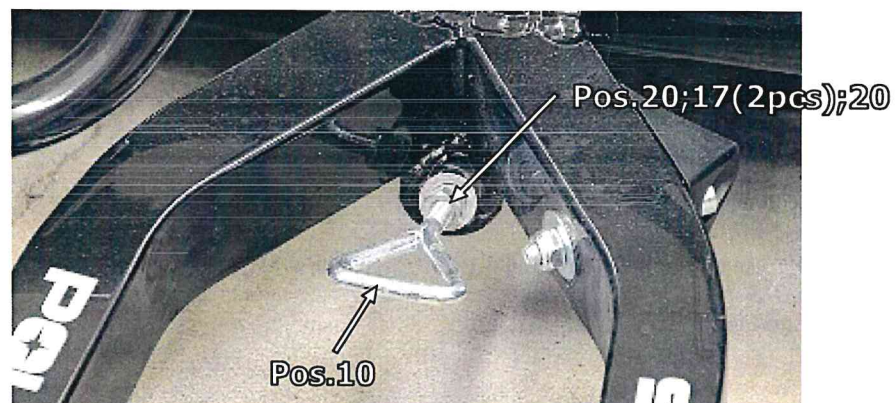

- Step 6 POLARIS snow plow installation to ATV. Removing in reverse order.
 Steg 6 POLARIS fastsättning snöplog på ATV. Ta bort i omvänd ordning.

