

IRON BALTIC

IRON BALTIC OÜ
Põldmäe tee 1
Vatsla 76915
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticld



IRON BALTIC


PLASTIC SKID PLATE

POLARIS

Sportsman XP1000 S

Code 02.26000


Version 06102023


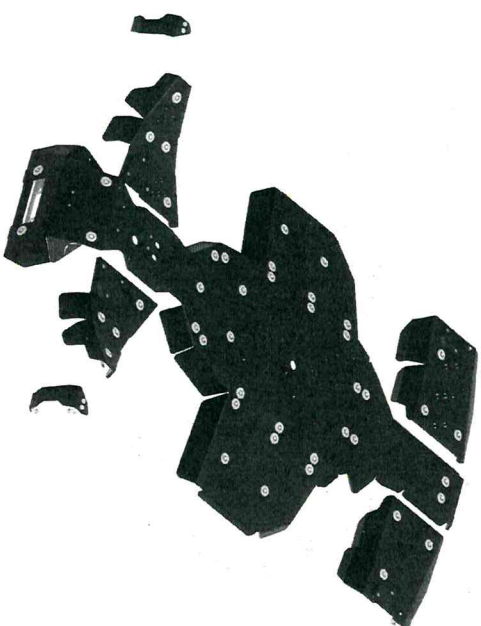


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

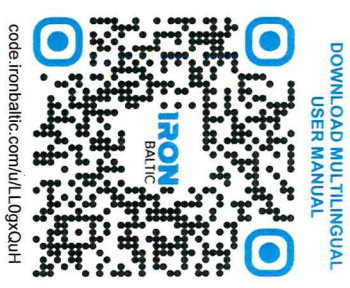


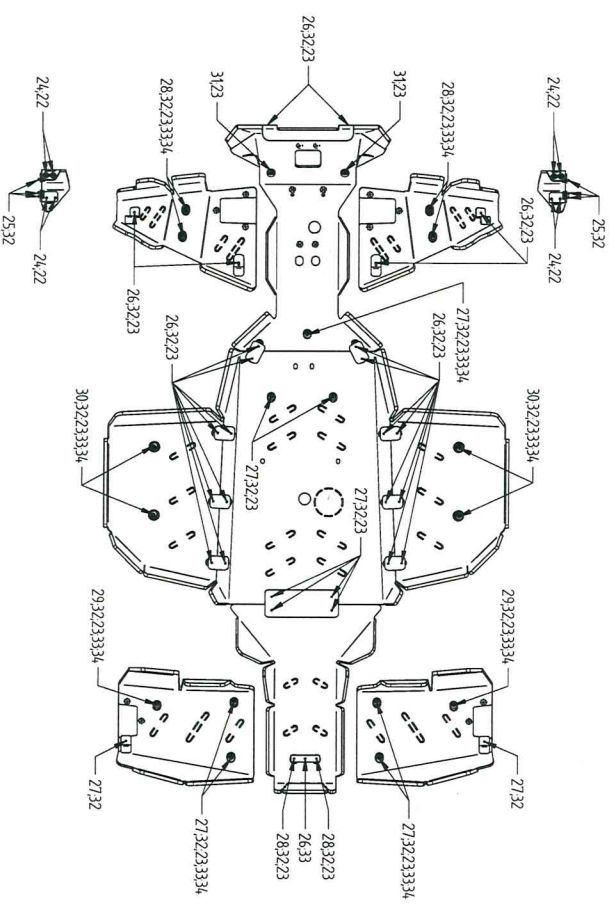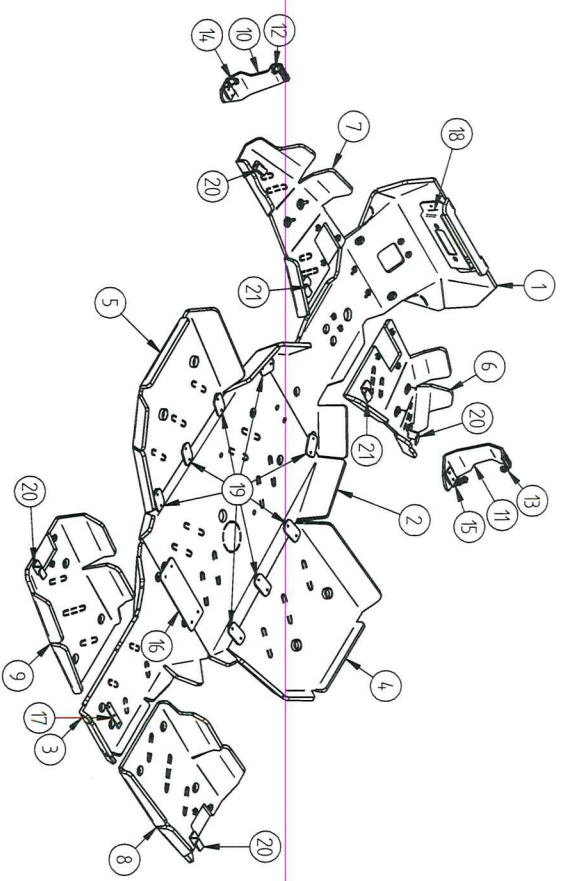


Step 11 Install caliper protectors to ATV.




Step 3 Install connecting plates (Pos. 13) to middle part.

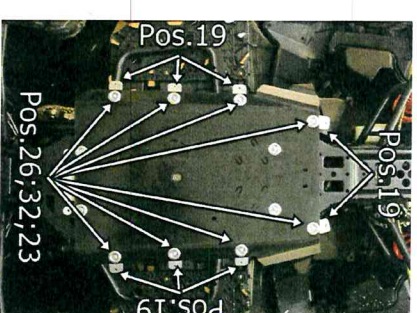

Step 12 Install rear arm protections (Pos.8 and Pos.9). Use installation brackets (Pos. 14) for fastening.

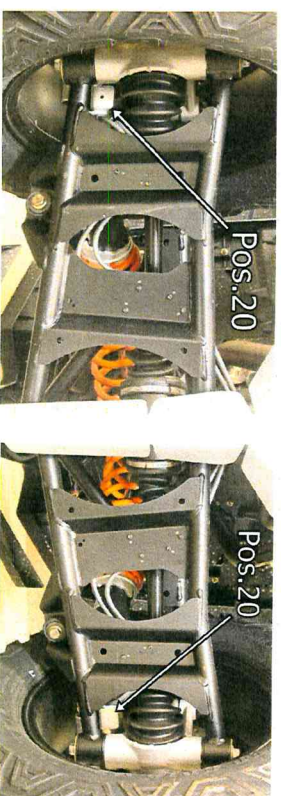

Step 4 Install rear part bracket (Pos. 11)

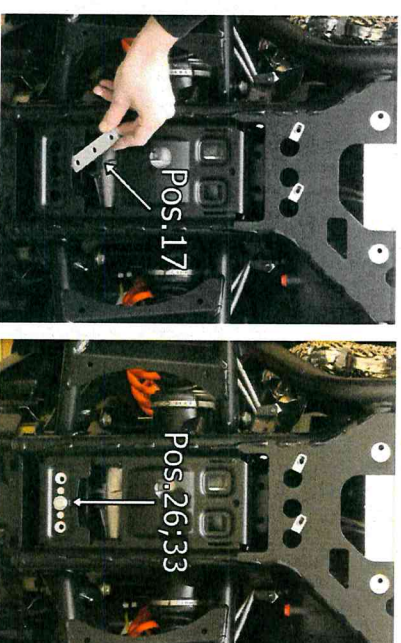

Step 5 Install skid plate rear part (Pos. 3)

