

TUNNEL BAG KIT

P/N 2884453; 2884454; 2884455; 2884456; 2889228;
2889258; 2889259

POLARIS

ENGINEERED PARTS
ACCESSORIES & APPAREL

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

APPLICATION

Verify accessory fitment at www.polaris.com


IMPORTANT

Lock & Ride Flex™ Retrofit Kit P/N 2884939 is required on snowmobiles not equipped with Lock & Ride™ integrated gas tank.


REQUIRED SOLD SEPARATELY

Only parts for installation of the Tunnel Bag Kit are included. Prior installation of the following additional kits is also required (sold separately), if snowmobile does not have the Lock & Ride Flex™ (A) integrated into the gas tank:

- *Lock & Ride Flex™ Retrofit Kit, P/N 2884939*

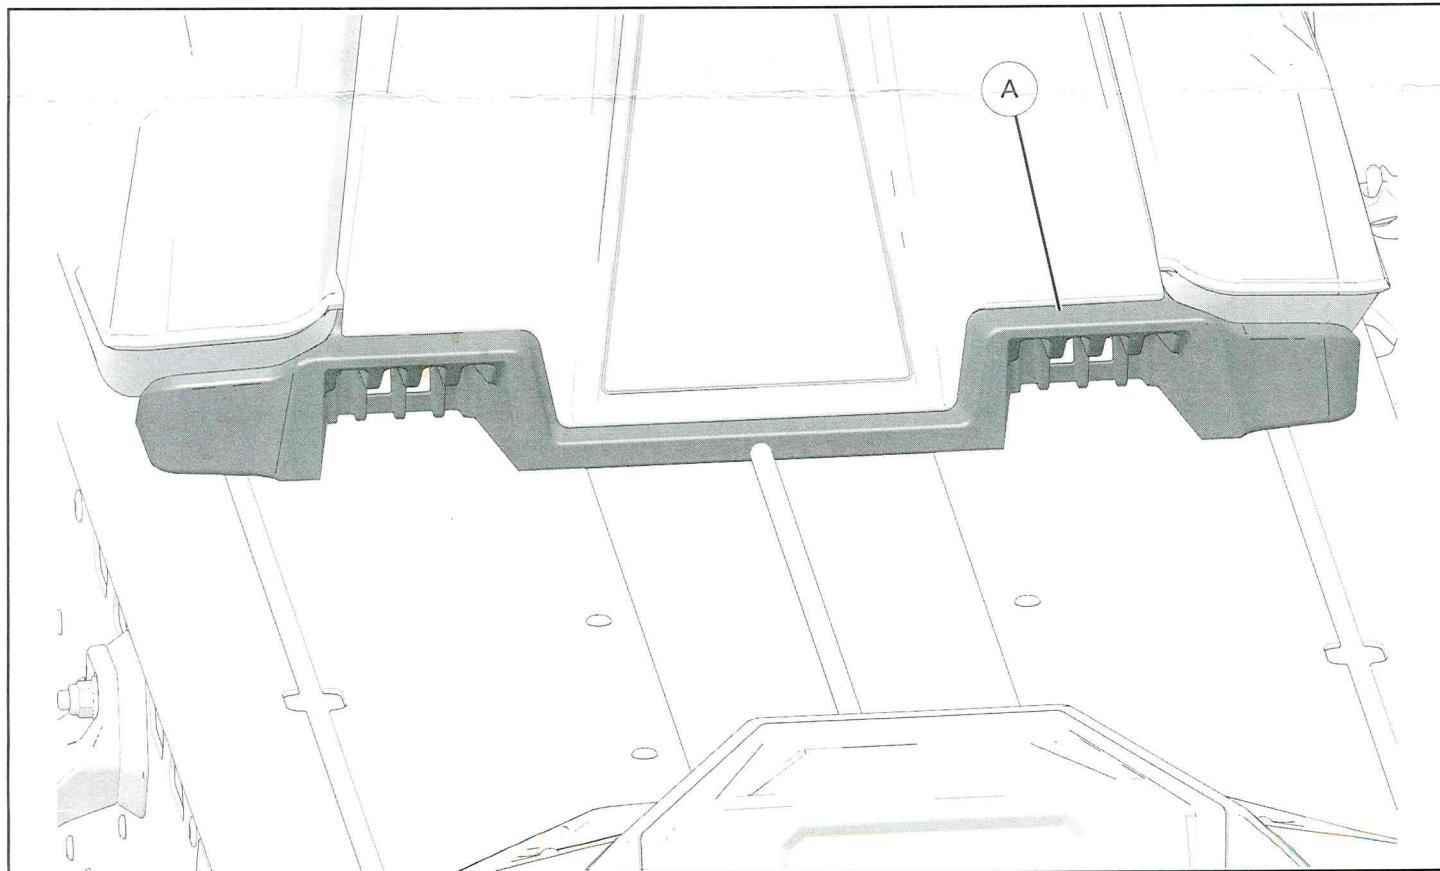

KIT CONTENTS

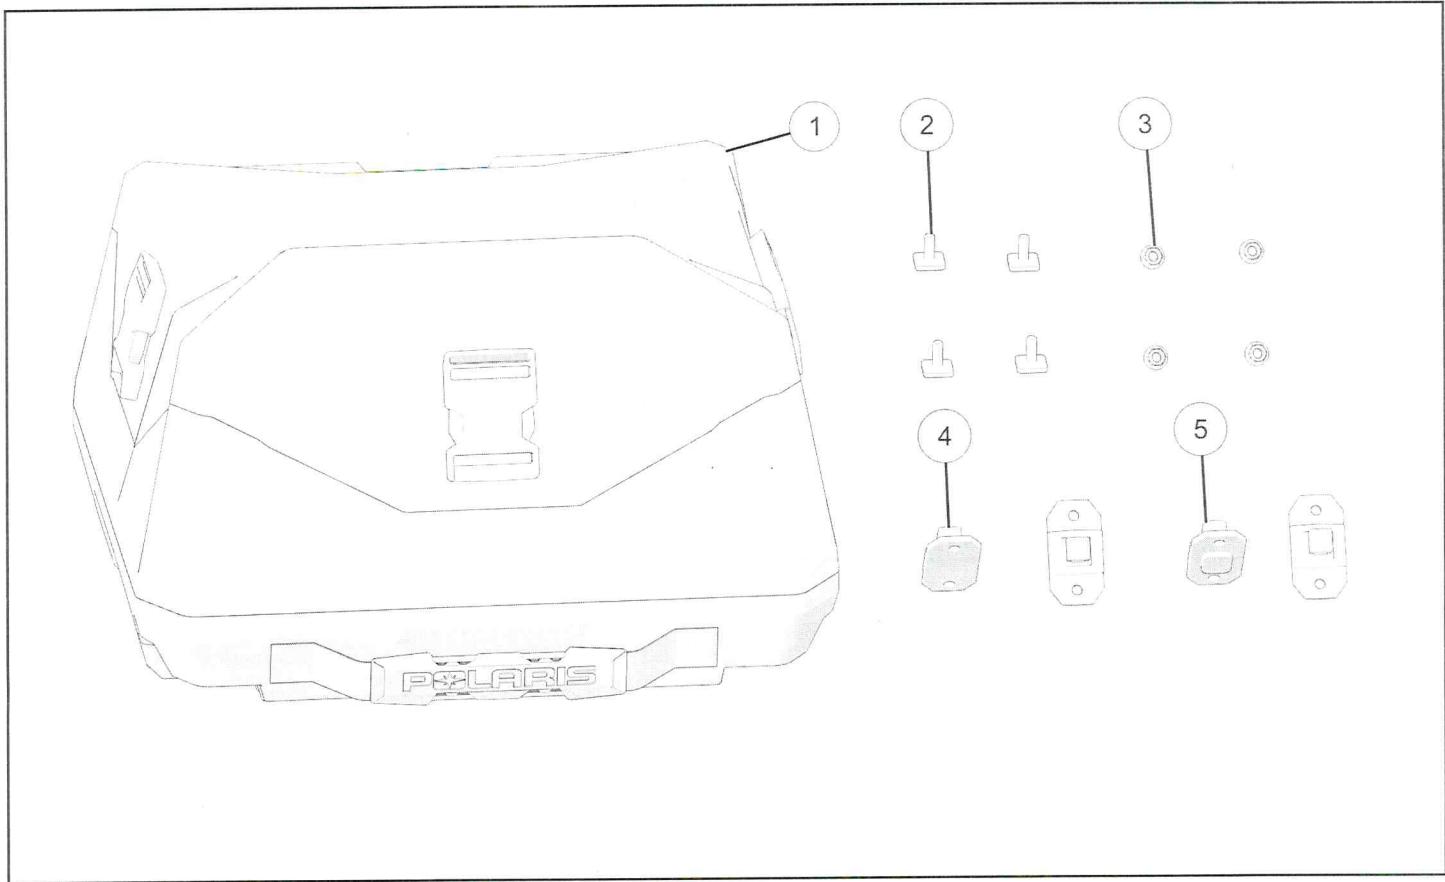

NOTICE

All images show 16 in. Tall Tunnel Bag.

REF	QTY	PART DESCRIPTION	P/N AVAILABLE SEPARATELY
1	1	Adventure Tunnel Bag, Tall Adventure Tunnel Bag, Low Sport Tunnel Bag, Tall Sport Tunnel Bag, Low M2 Journey Bag Small Burandt Bag Large Burandt Bag	n/a
2	4	T-Slot Bolt, (M6 x 1.0 x 16)	7520514
3	4	Nut, Hex Flange, (M6 x 1.0)	7547453
4	2	Latch, Dowel Upfit	5457494
5	2	Latch, Dowel	5457032

TOOLS REQUIRED

- Safety Glasses
- Socket Set, Metric
- Torque Wrench
- Wrench Set, Metric

IMPORTANT

Your Tunnel Bag Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

VEHICLE PREPARATION


GENERAL

1. Park snowmobile on a flat surface.
2. Push the engine stop switch down to the OFF position.
3. Turn the key to the OFF position and remove key.


ACCESSORY INSTALLATION

M2 JOURNEY BAG PREPARATION


1. Remove bag from hard shell carrier. Unzip inside liner.

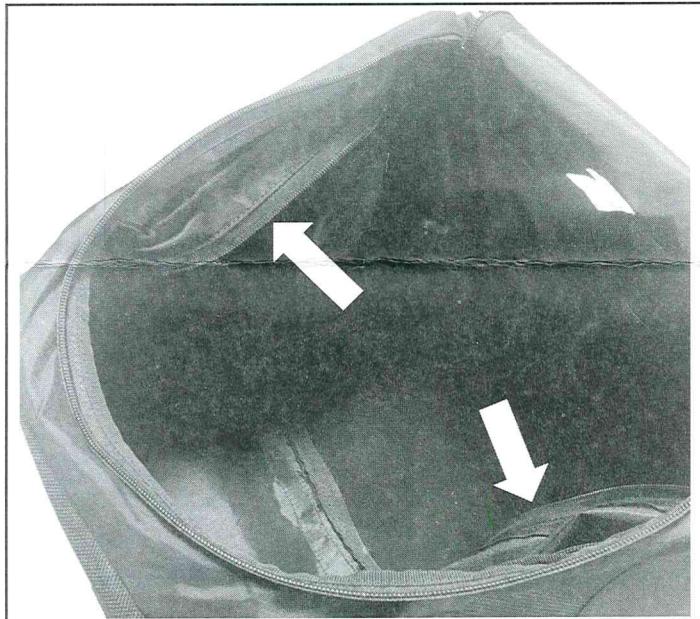

2. Position bag support so side with arrow is up as shown.

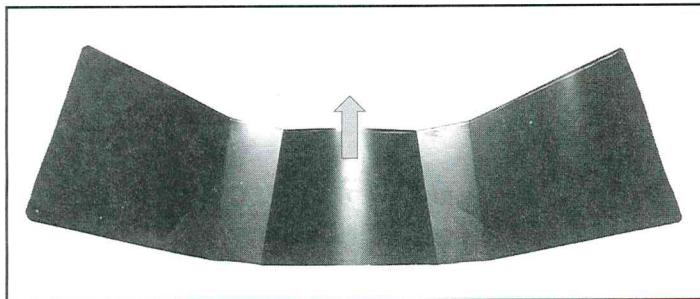

3. Insert bag support between inside liner and outside of bag.

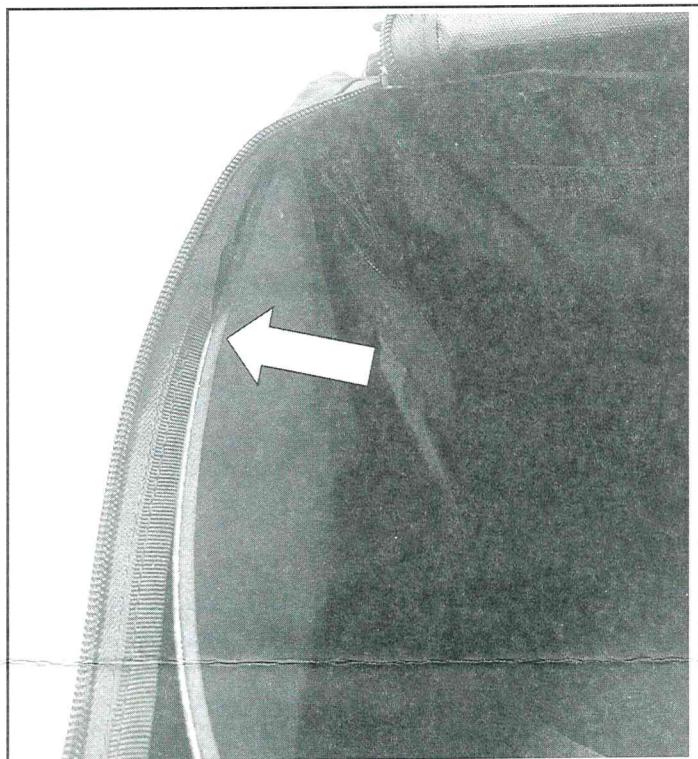

4. Zip inner liner and install bag.

TUNNEL BAG INSTALLATION

INSTALLATION FOR MATRYX


NOTICE

On RMK models T-slot bolts will install through the tunnel.


NOTICE

16 in. Tunnel Bag shown, for 8 in. Tunnel Bag use slots closer to the gas tank.

1. Insert two T-slot bolts ② into slot opening and slide to left and right of opening.

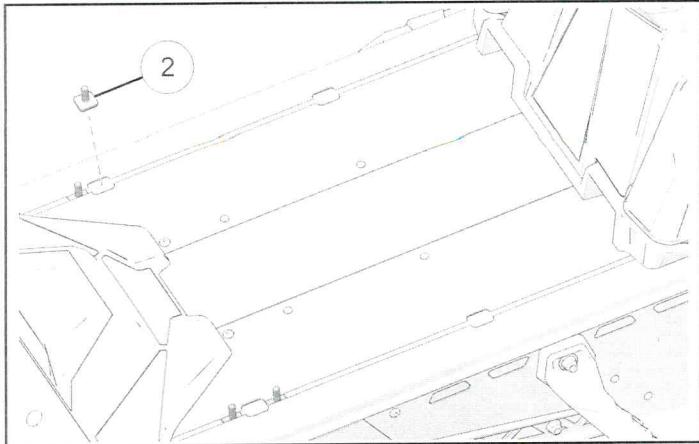


2. Slide latch ⑤ onto T-slot bolts. Bottom of latch should insert into slot.

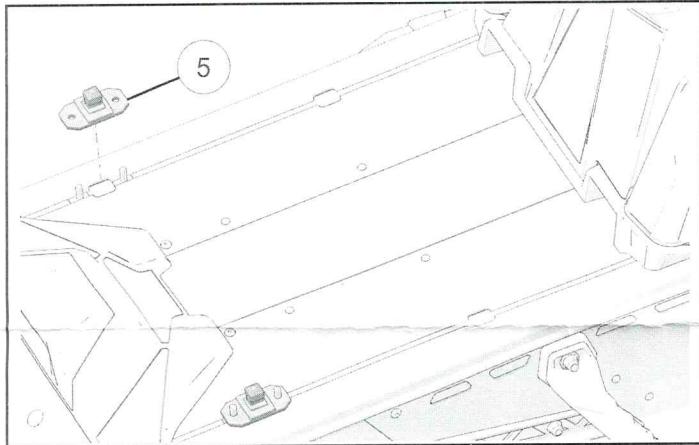


3. Attach nuts ③. Torque to specification.

TORQUE

Latch Nut ③:
70 in-lbs (8 N·m)

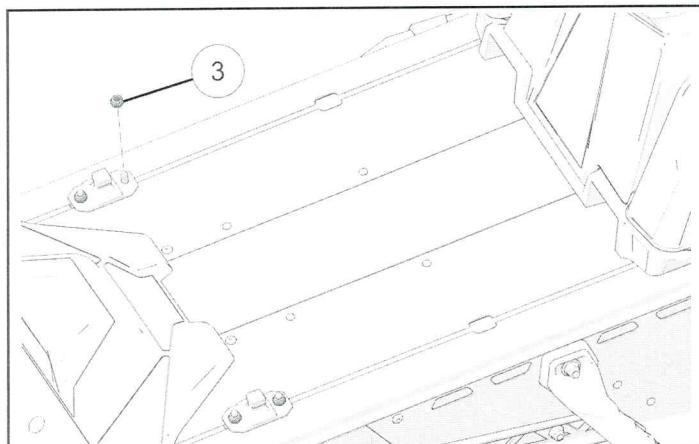


4. Insert feet of Tunnel Bag ① into Lock & Ride Flex™. Place bag down on latches, lift and release clamps ④ to secure. To remove bag, lift clamps and lift up bag.

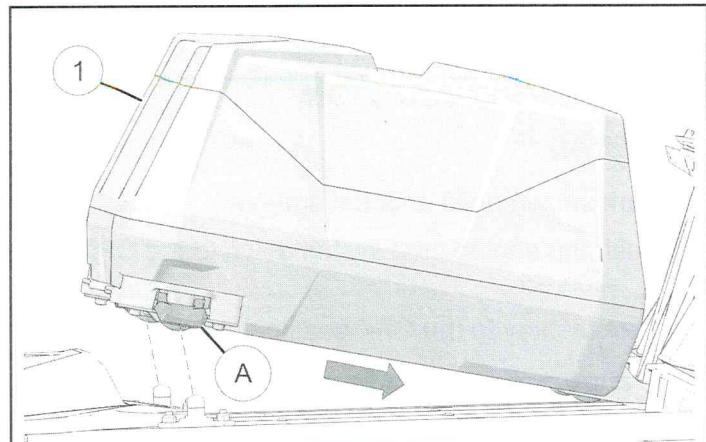


INSTALLATION FOR RETROFIT KITS


1. Insert T-slot bolt ② into slot and slide to approximate desired position.

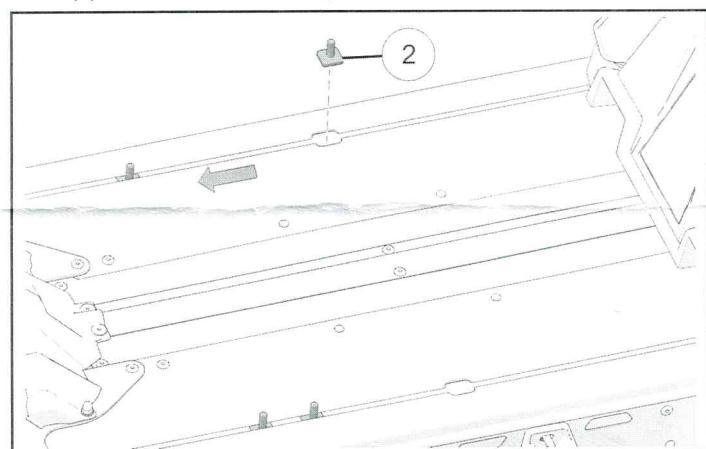


2. Slide latch ④ onto T-slot bolts.

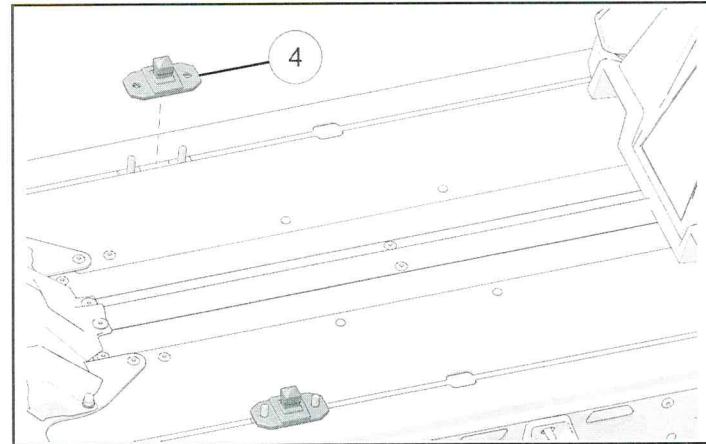

3. Attach nuts ③ loosely so latch can still be moved.

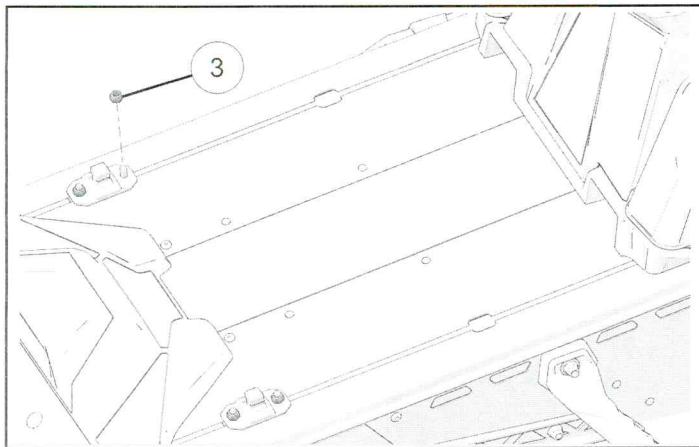


4. Place bag onto snowmobile to position latches so they insert into holes in bag. Carefully remove bag.

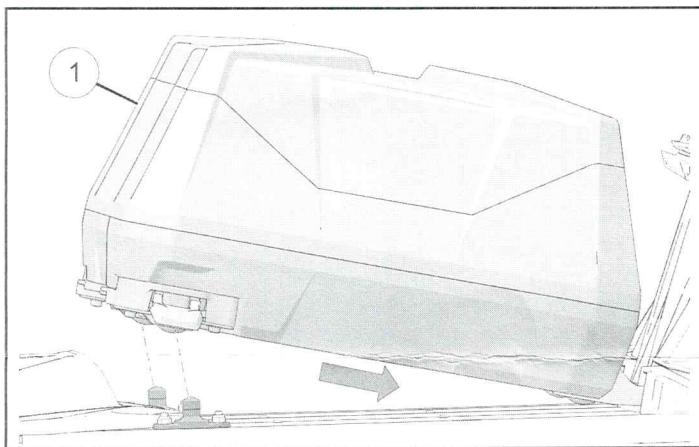

5. Torque nuts ③ to specification.

TORQUE
Latch Nut ③: 70 in-lbs (8 N·m)

6. Insert feet of Tunnel Bag ① into Lock & Ride Flex™. Place bag down on latches, lift and release clamps ④ to secure. To remove bag, lift clamps and lift up bag.

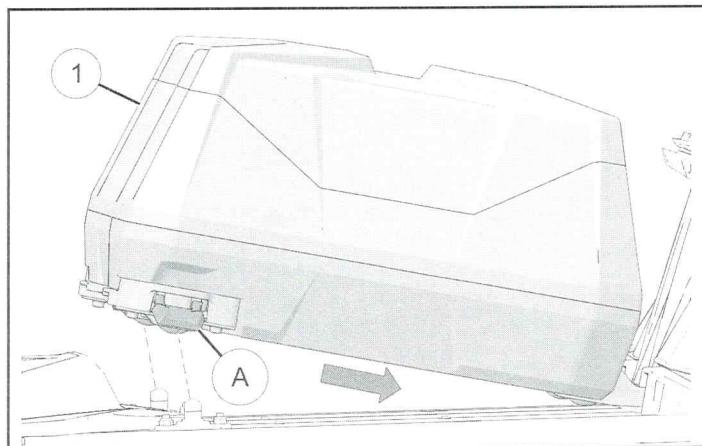

INSTRUCTION FEEDBACK FORM

A feedback form has been created for the installer to provide any comments, questions or concerns about the installation instructions. The form is viewable on mobile devices by scanning the QR code or by clicking [HERE](#) if viewing on a PC.

